


VNA-EB-DBJ-1DIN

Einbau der 1-DIN Blende

Ausbau der Ablagefächer

Die Fächer können, mit leichtem Druck der Finger an den Seiten (rote Kreise), herausgezogen werden. Es empfiehlt sich das obere Fach zuerst zu entfernen.

Die Rastnasen befinden sich an markierten Stellen (rote Pfeile).

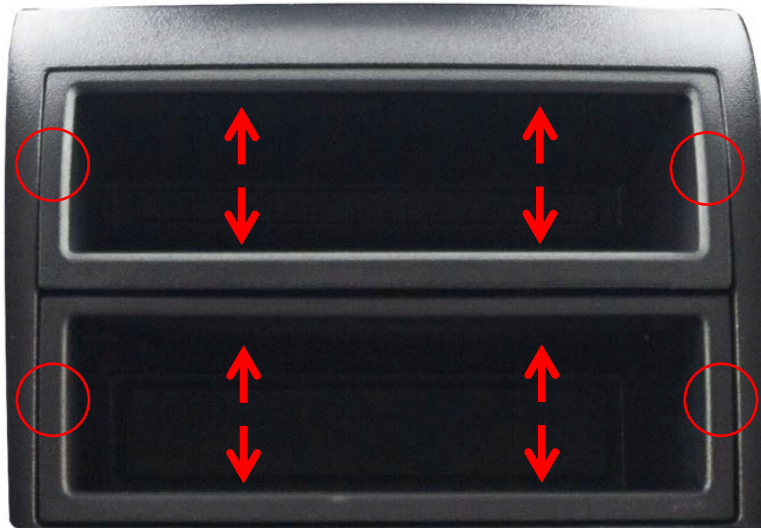

Montagevorbereitung

Bevor die neue Blende in den Radioschacht eingebaut werden kann bedarf es einiger Vorbereitungen.



VNA-EB-DBJ-1DIN

Zunächst müssen die mitgelieferten Halteklammern auf der Rückseite der Blende gesteckt werden. (Bild)



Anschließend das Ablagefach in die Blende von vorne nach hinten einschieben bis es einrastet.



Blende kann in den Radioschacht eingesetzt werden. Die Blende zunächst mit den unteren Rastnasen in die passenden Aussparungen bringen und anschließend mit den *oberen Rastnasen festdrücken.

*Es empfiehlt sich von innen bei den Rastnasen nachzuhelfen.



Als nächstes wird der Blecheinschubrahmen des Nachrüstradios in der Blende montiert.
Die Befestigungs- Arretierungsglaschen nach außen drücken. Nun kann das Radio installiert werden.


VNA-EB-DBJ-1DIN

1-DIN fascia plate installation guide

Removal of the storage compartments

The pockets can be pulled out with light finger pressure on the sides (red circles). It is recommended to remove the upper pocket first.

The noses are located at the marked positions (red arrows).

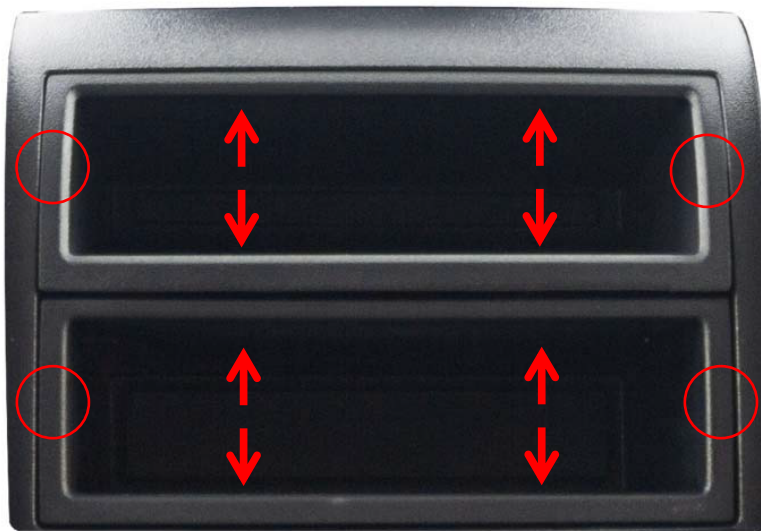

Pre-installation works

Before the new fascia plate could be installed in the radio slot, some preparations are needed.



VNA-EB-DBJ-1DIN

Insert the attached speed-fasteners in place as shown below.



Press the pocket into the fascia plate till it clicks into place.



Now the fascia plate could be inserted into the dashboard radio slot. At first bring the panel into position with the latches on the bottom side, after that press it on with the *upper side.

*It is advisable to support the latches from inside of the radio slot.



Next step:

Install the metal cage from the aftermarket. Fix the lugs behind the fascia as shown with the red arrows. The fascia installation is completed. Continue with the aftermarket-radio connection.