


VNA-RCAM-KIT110

Weitsicht Upgrade-Kit für VNA-RCAM-DBJ110/115




CAR MEDIA SYSTEMS


INSTALLATIONSANLEITUNG

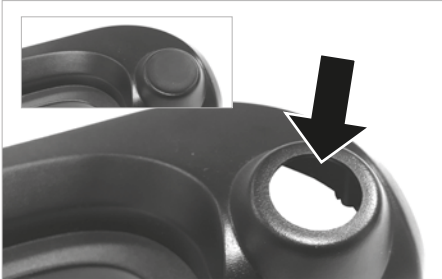


Entfernen Sie den Abdeckstopfen rechts am Gehäuse von VNA-RCAM-DBJ110/115.

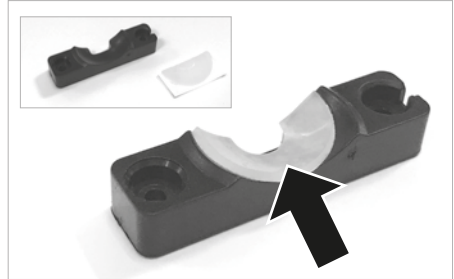


Kleben Sie die beiliegende Kunststoffdichtung auf den beiliegenden Haltebügel.

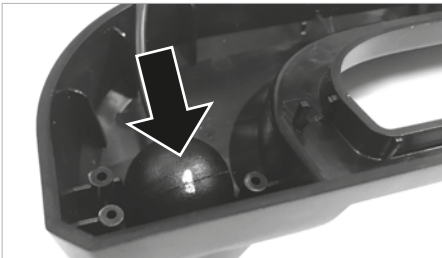


Positionieren Sie die Upgrade-Kamera von hinten durch die Öffnung am Gehäuse.

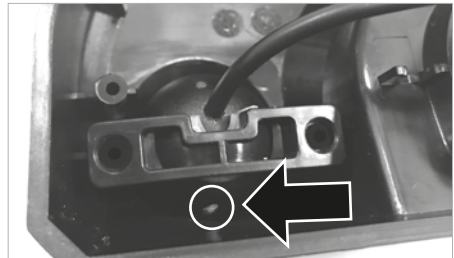

Achten Sie beim Ausrichten darauf, dass die weiße Markierung nach unten zeigt, wenn Sie den Haltebügel anlegen.

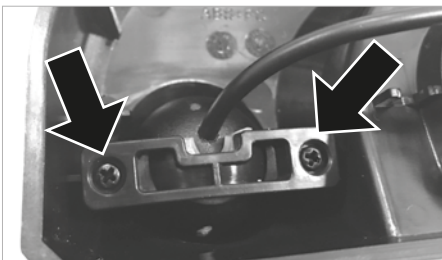

Verwenden Sie die beiliegenden Schrauben zum Befestigen des Haltebügels. Ziehen Sie die Schrauben ganz fest an, bis sich der Haltebügel um die Kamera biegt.

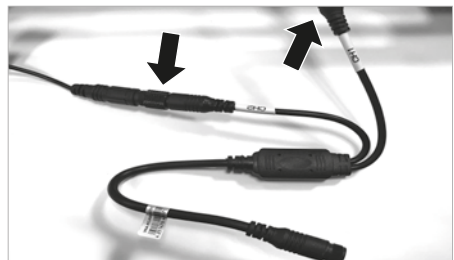

Schließen Sie dann die beiden Kamera-kabel am beiliegenden Y-Adapter an. Die Upgrade-Kamera muss an CH2 und die Kamera von VNA-RCAM-DBJ110/115 an CH1.


VNA-RCAM-KIT110

Distant View Upgrade Kit for VNA-RCAM-DBJ110/115




CAR MEDIA SYSTEMS


INSTALLATION GUIDE

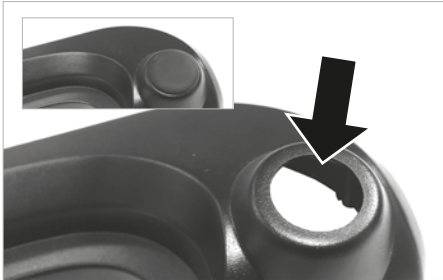


Remove the cover plug on the right of the housing of VNA-RCAM-DBJ110/115.

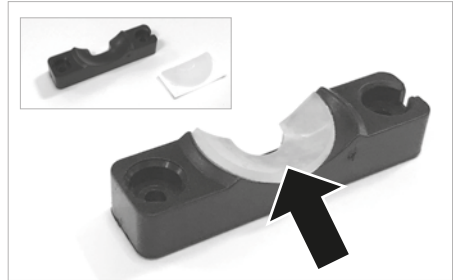


Stick the enclosed plastic seal onto the enclosed retaining bracket.

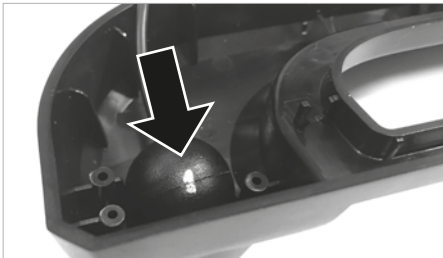


Position the upgrade camera from behind through the opening on the housing.

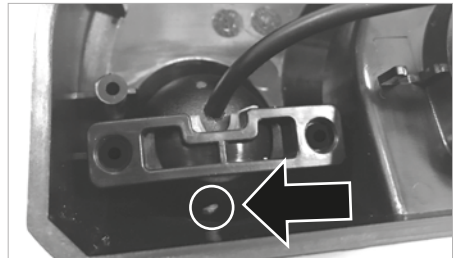

When aligning, make sure that the white marking is facing down when you put on the retaining bracket.

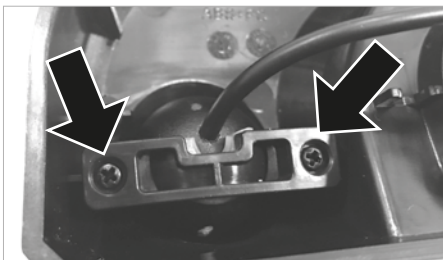

Use the included screws to secure the mounting bracket. Fully tighten the screws until the bracket flexes around the camera.

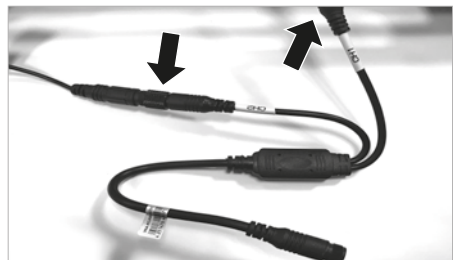

Then connect the two camera cables to the included Y-adaptor. The upgrade camera must be connected to CH2 and the camera from VNA-RCAM-DBJ110/115 to CH1.